

EN **BUMPER KIT INSTALLATION MANUAL**

DE **MONTAGEEINLEITUNG FÜR STOBFÄNGER-KIT**


RU **ИНСТРУКЦИЯ ПО УСТАНОВКЕ ЗАДНЕГО БАМПЕРА**




For: CFORCE 600 (2020-)

2444.8105.1




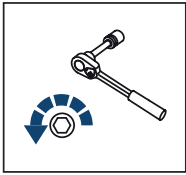


EN Regular fasteners
DE Schraube herausdrehen
RU Штатный крепеж

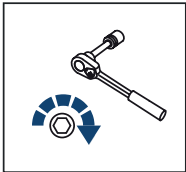


EN Regular fasteners
DE Schraube eindrehen und festziehen
RU Штатный крепеж

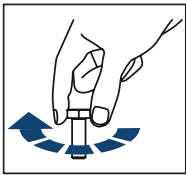


EN Screw a several turns
DE Schraube wenige Umdrehungen eindrehen
RU Вкрутить на несколько оборотов

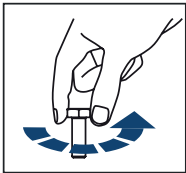

EN Loosen bolts
DE Schraube wenige Umdrehungen lösen
RU Выкрутить на несколько оборотов

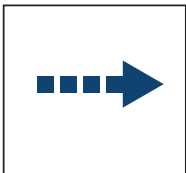

EN Movement Arrow
DE Bewegungsrichtung
RU Движение

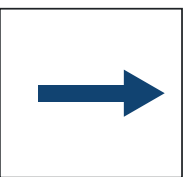

EN Location/Position Arrow
DE Blickrichtung / Postionsrichtung
RU Расположение



EN Screw Arrow
DE Drehrichtung
RU Поворот

